

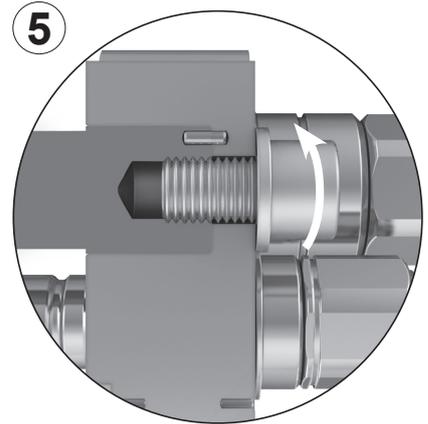
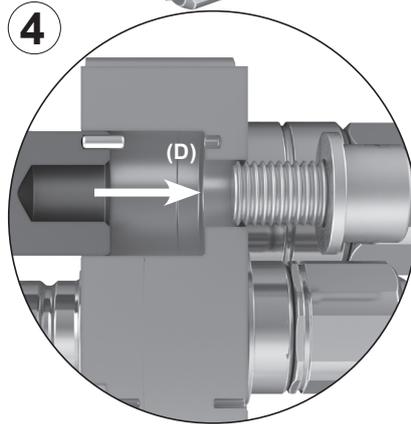


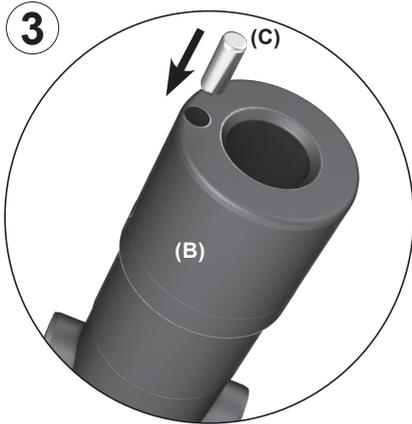

CEJN AB  
Hasslumvägen 33  
SE-541 25 Skövde, Sweden  
www.cejn.com

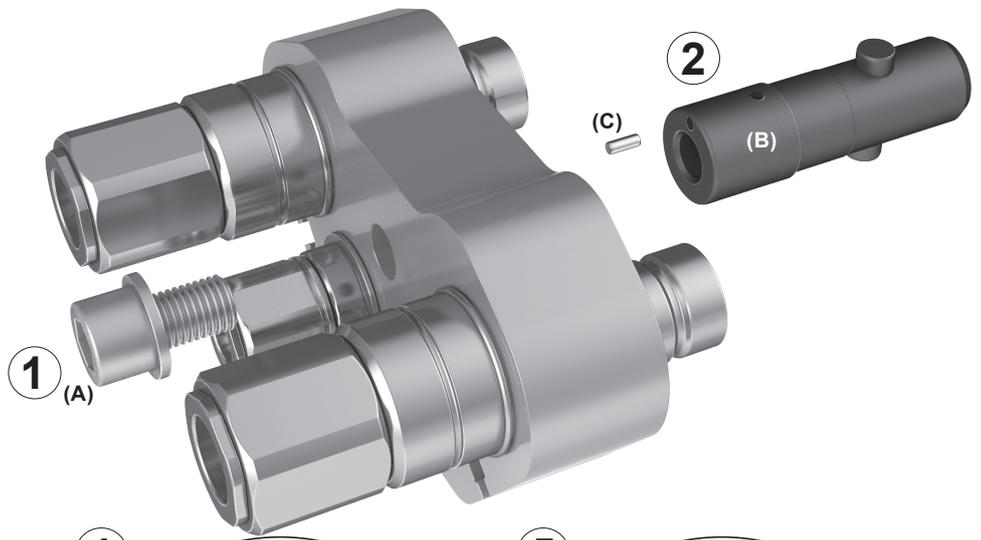

GB

#### HOW TO REPLACE THE MULTI-X CENTER BOLT KIT

1. Use an Allen key to remove the screw (A).
2. Remove the old center bolt (B) including the locking pin (C). The center bolt is interference fitted to the aluminum body and it may require pressing it to remove it.
3. Insert the new locking pin (C) into the new center bolt (B).
4. Insert the new center bolt into the aluminum body. While inserting the center bolt the locking pin (C) shall find the hole in the aluminum body (D) which will lock the center bolt from rotation.
5. Add glue to the screw (A) (Omnifit 230M or equivalent) and assemble it with the new washer to the center bolt and tighten it to a recommended torque of  $120 \pm 5$  Nm.

J

#### マルチ-X センターボルト交換方法

1. 六角レンチを使用してネジを取り外します (A)。
2. 古いセンターボルト (B) を、ロックピン (C) と共に取り外します。センターボルトはアルミ製本体に隙間なく取り付けられているため、場合によっては取り外す際に押す必要があります。
3. 新しいセンターボルト (B) に新しいロックピン (C) を差し込みます。
4. 新しいセンターボルトをアルミ製本体に挿入します。センターボルトを挿入すると、ロックピン (C) がアルミ製本体 (D) の穴に当たり、センターボルトが回転しないようにロックされます。
5. ネジ (A) に接着剤 (Omnifit 230M または同等品) を付け、新しいワッシャーと共にセンターボルトに組み付け、推奨トルク  $20 \pm 5$  Nm で締め付けます。